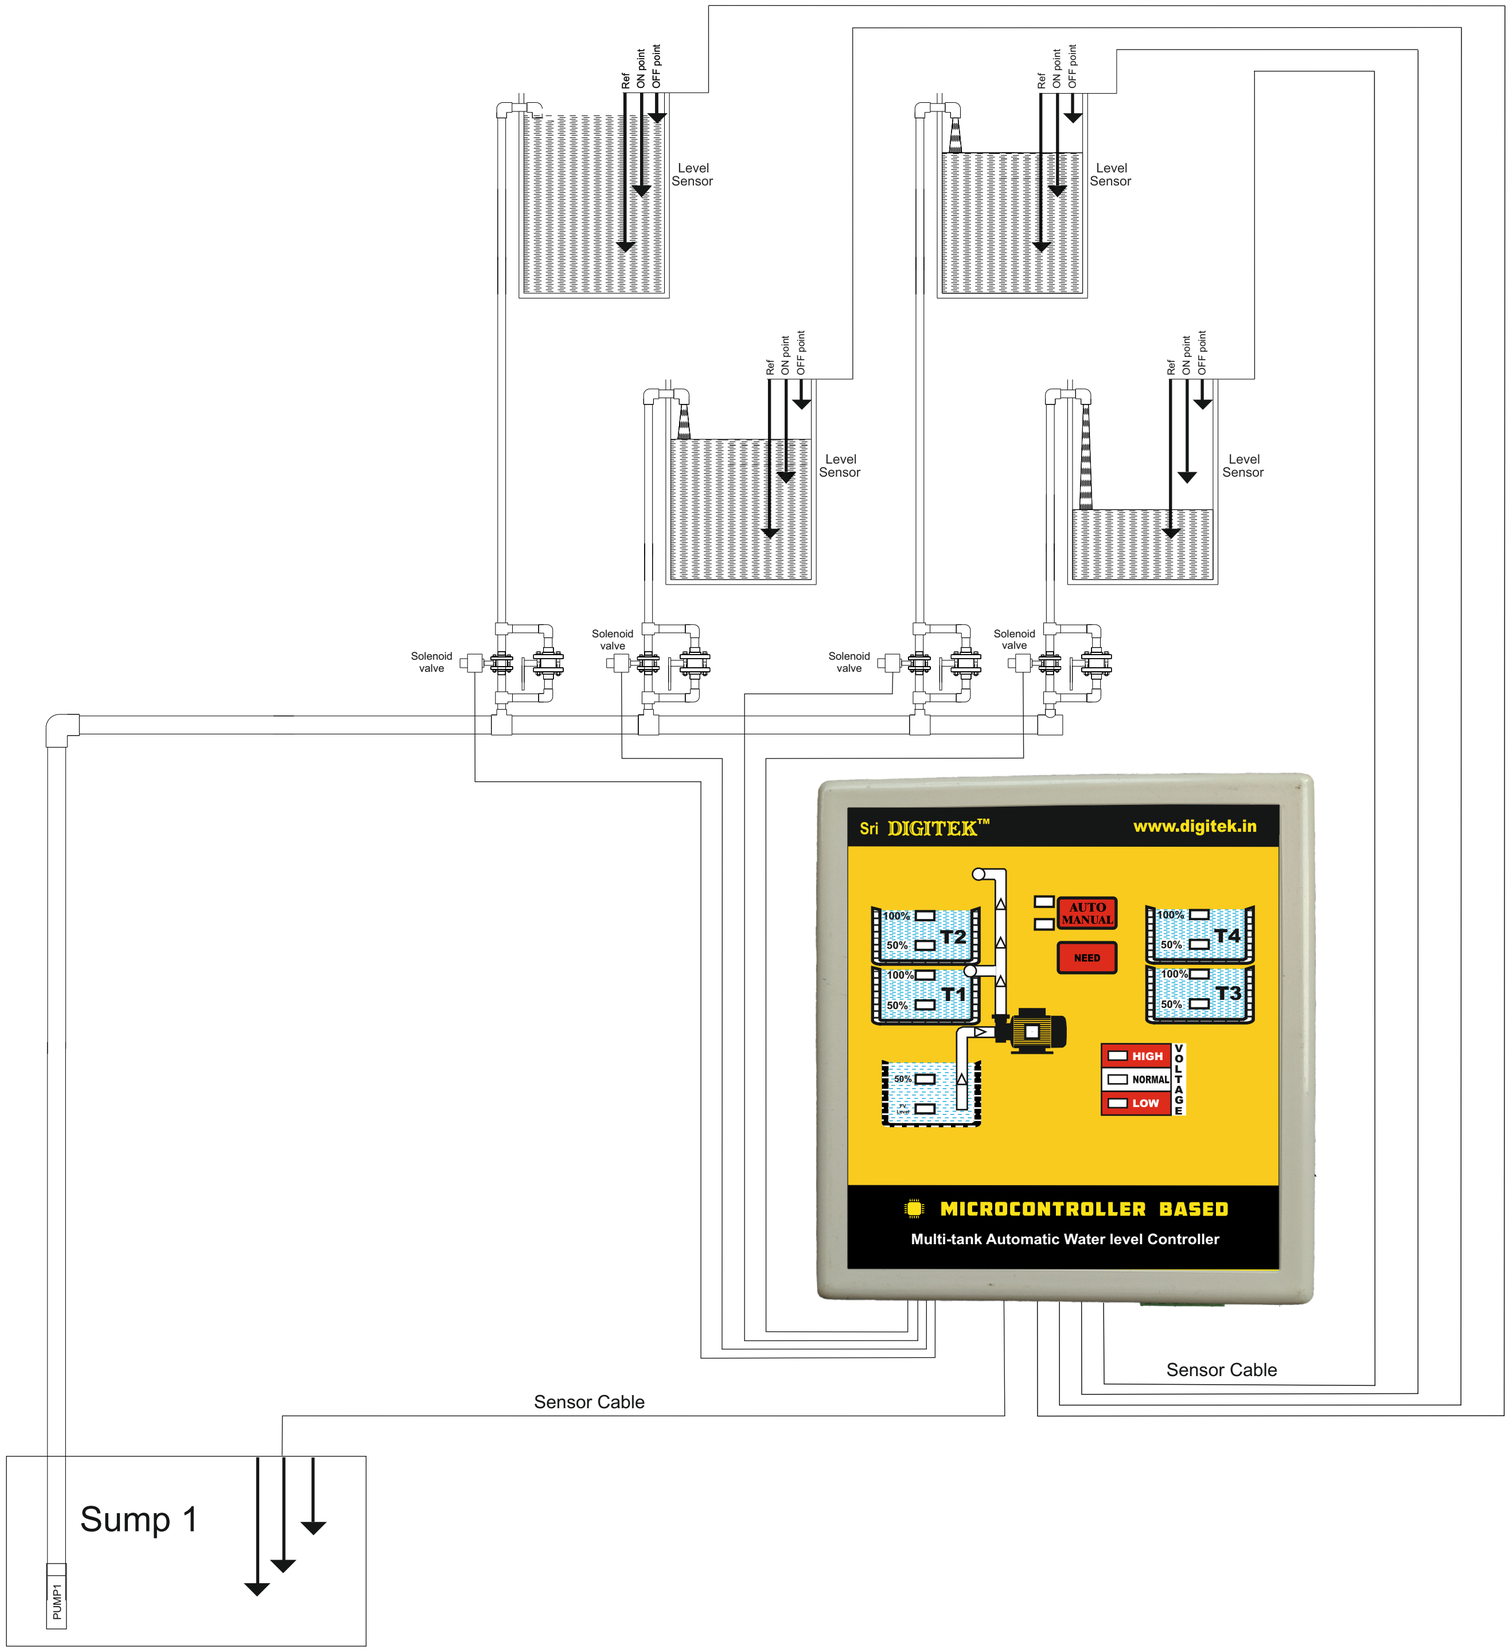


ULDX-DR-3PH-4T-SOL 4 Tank Controller With Level Indicator

1.For each Delivery pipe should be fitted with Solenoid valve.

solenoid valve should be placed parrel with manual valve.

2.If any tank level is below ON Point Motor switches on and when water reaches full it switches off.

3. Each tank level is controller individually.

4.When one tank is full and other tank below ON point Motor switches ON, the Float valve stops over flow of Filled tank, water fills up to empty tank gets filled up to off Point.

For More Features please refer product catalouge